

PLATFORM INSTALLATION INSTRUCTIONS

Vehicle: 2003 AND UP EXPEDITION

Date: 01-14-2011

Drawn By: W.S.T.

INSTALLATION STEPS

- STEP 1 - Remove OEM Third Row Seat and Rear Floor Trim
- STEP 2 - Remove Black Cover From Spare Tire Lowering Point And Bolt Stud
- STEP 3 - Remove Bolt Stud Located To the Left of the Spare Tire Lowering Point
- STEP 4 - Attach The Driver and Passenger Front Brackets To the Bottom Of The Platform Using The 1/2"-20 x 1 1/2" Bolts With Flat Washers And Lock Nuts (See Diagram)
- *DD NOT TIGHTEN FULLY***

STEP 5 - Located Behind The 2nd Row of Seats, Where the Floor Contours Up, There Are 2 Existing Mounting Holes Used For The 3rd Row Of Seats. The Carpet Should Be Pre Cut. If Not A 2'x2' Cut Will Need To Be Made.


STEP 6 - Lay The Platform In The Truck Carpet Side Up And The Spare Tire Lowering Point To The Rear Tight To the Rear Door Opening Trim. Drill 2 3/8" Holes 1" In From The Rear Edge Of The Platform

*** LOOK FOR OBSTRUCTION BEFORE DRILLING ***

STEP 7 - Using The 3/4" - 20 x 2" Bolts, 3/4" Washers and the 3/4" Lock Nuts Bolt The Rear Of The Platform In Place

STEP 8 - Using The 3/4"-16 x 1" Bolts, Mount The Driver and Passenger Side Front Brackets To the Floor and Tighten The Bolts Holding The Brackets To The Platform

STEP 9 - Using The 3/4" Hardware Mount the Cabinet To The 6 T-Nuts In The Platform

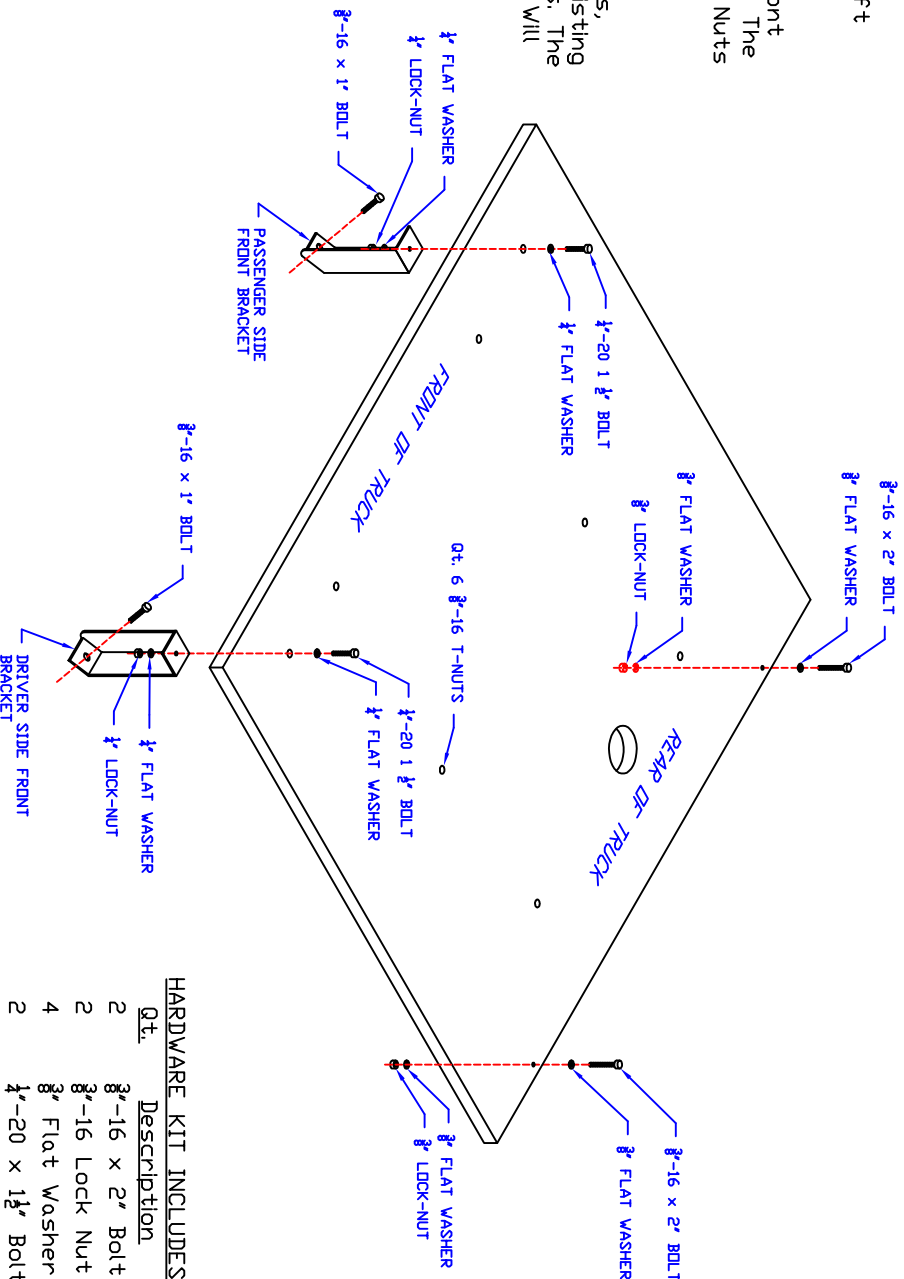

HARDWARE KIT INCLUDES

QTY.	Description
2	3/4"-16 x 2" Bolt
2	3/4"-16 Lock Nut
4	3/4" Flat Washer
2	1/2"-20 x 1 1/2" Bolt
2	1/2"-20 Lock Nut
4	1/4" Flat Washer
2	3/4"-16 x 1" Bolt
6	3/4"-16 x 3" Bolt